

SHW OFFROAD

5th Gen 4Runner Drawer System Install




1. Begin by removing the factory sliding tray from the vehicle if equipped. Once removed we suggest adding some dampening material on the cargo floor. Dynamat is a good solution.
2. Once that is completed, remove the tie down cover and bump from behind the rear seat. Do this by pulling up on the plastic tab to expose the bolt that anchors the tie down to the vehicle. Remove the bolt with a 10mm Socket.



3. Remove the trim piece behind the rear seats. Reinstall the factory tie downs with the original hardware.




4. Install the driver side wing caps and wing. The wing cap screws will be installed from the inside of the drawer system. The wing hinges should already be installed, you simply need to start the hooks at the top and press at the bottom.

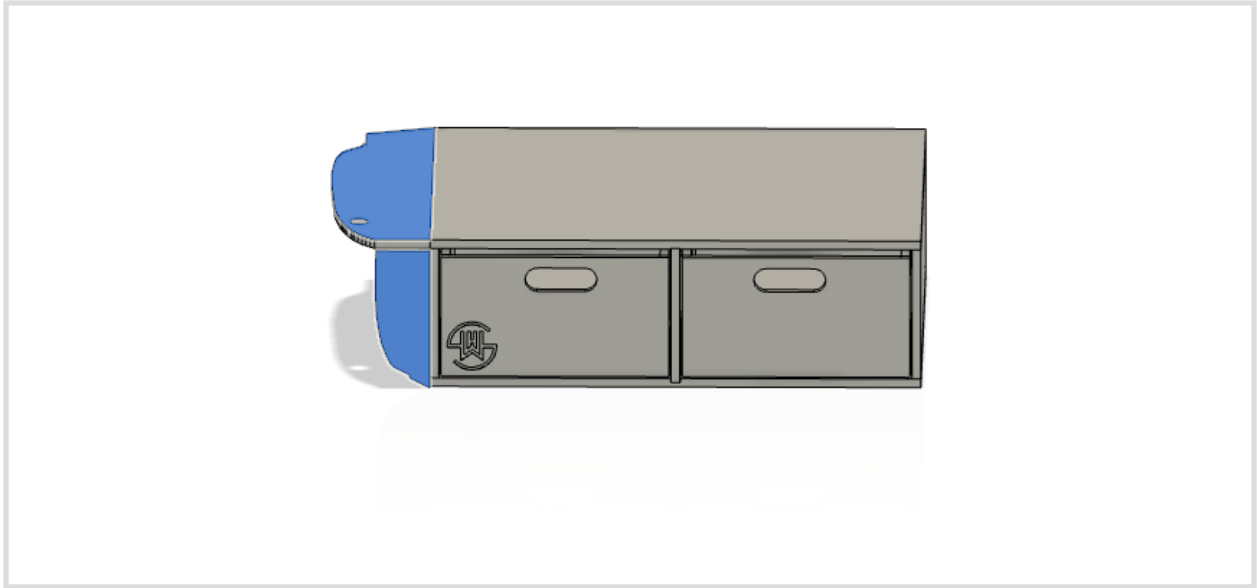

5. Slide the drawer system into the vehicle. Be careful with the wing cap on the driver side. Make sure the wing is in the upright position when you go to slide the system into the cargo area.

6. Install the driver side wing cap and wing.

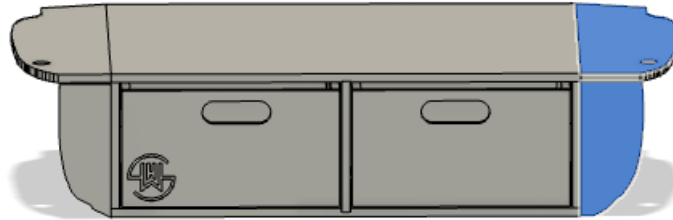

7. Loop the included blue cargo straps through the D Rings on the drawer system and the factory tie downs. Snuck each corner one at a time, then go back and tighten them down. Once in place and tightened, cut the excess strap away and use a flame to melt the strap end to keep it from fraying

