

SHW OFFROAD

## FJ Cruiser Expedition Drawer System Installation Instructions




1. Begin by removing the 4 Factory Tie down points in the cargo area.
2. Using 2 of the bolts you removed, bolt the 2 L brackets provided to the threaded holes nearest the second row seat



3. Once the L brackets are bolted down, you can put the drawer system (without the drawers) into the Cargo area. Once in, push the system back until it hits the L brackets. Using the two bolts provided bolt the front of the drawer system down into the 2 holes nearest the tail gate.



4. Once you have tightened the bolts in step 3, lower the seat backs of the second row and using the screws provided, screw the L brackets into the drawer system.

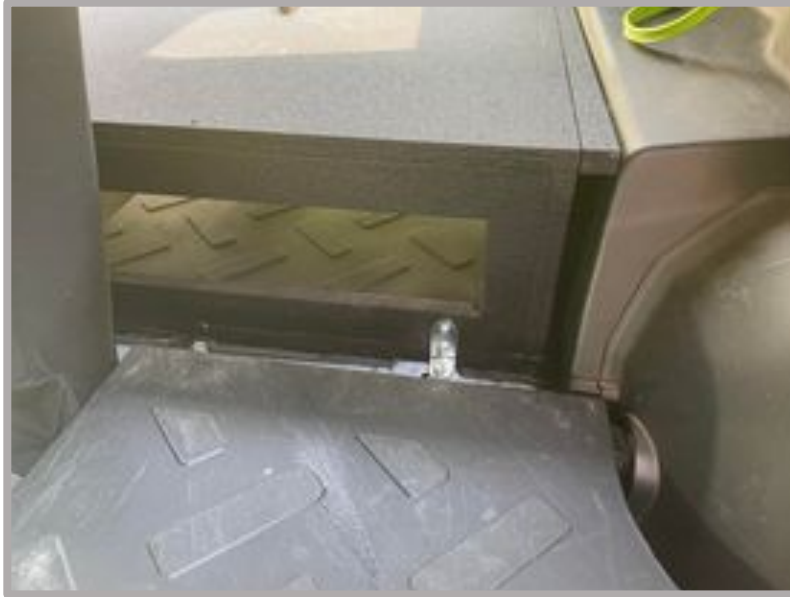



5. Re-install the drawers into the drawer system, your drawers are ready to be used!

