

SHW OFFROAD

1st Gen Sequoia Drawer System Install




1. Begin by removing the third row seats from the vehicle.
2. Remove the bolts for the factory tie down loops towards the rear hatch and set the tie down aside. These bolts will be reused to anchor the system down later. Lift the carpet covers to access the bolt heads.




3. Layout the included blue tie down straps so that they loop through the third row anchors. Make sure to leave enough strap that the cam lock end is positioned where the second row seats fold down (it is easiest to have your second row folded up). There will not be much room on the sides when the system is in the truck.




4. Install the included D-Rings onto the side of the drawer system box using the included screws. Positioning is flexible, just make sure the D Rings are pulled towards the circled anchors above when the strap is tensioned. The D Rings should be positioned towards the back of the box (near the second row).
5. Remove the two drawers from the drawer chassis. You do this by pressing the black lever on the non locking slide, and pulling down the locking lever on the locking slide. If the black lever gives you trouble, try pushing it up instead of down. [This video](#) shows a slightly different designed drawer slide, but the process is the same.
6. Place the drawer chassis in the vehicle. The drawer chassis should be positioned over the straps in the rear, just make sure the cam lock end on the strap is still accessible.
7. Loosely install the OEM tie down bolts through the base of the drawer system.

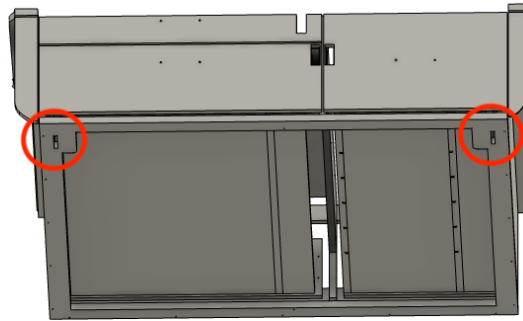

8. Install the wing caps of the system using the existing holes and the included screws.

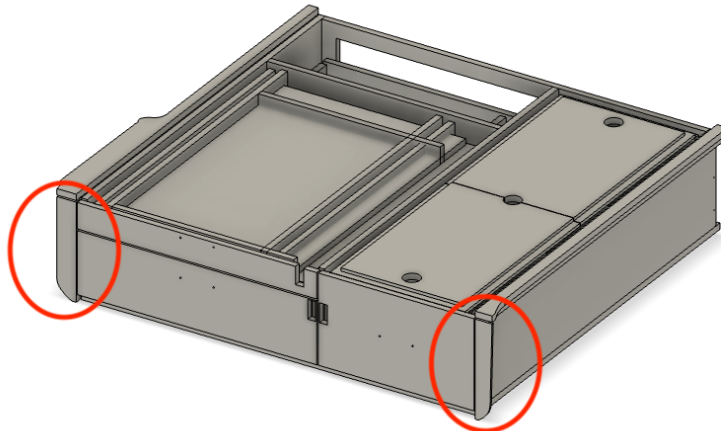

9. Install the wings of the systems using the existing holes and the included screws. The screws should be installed from the inside.

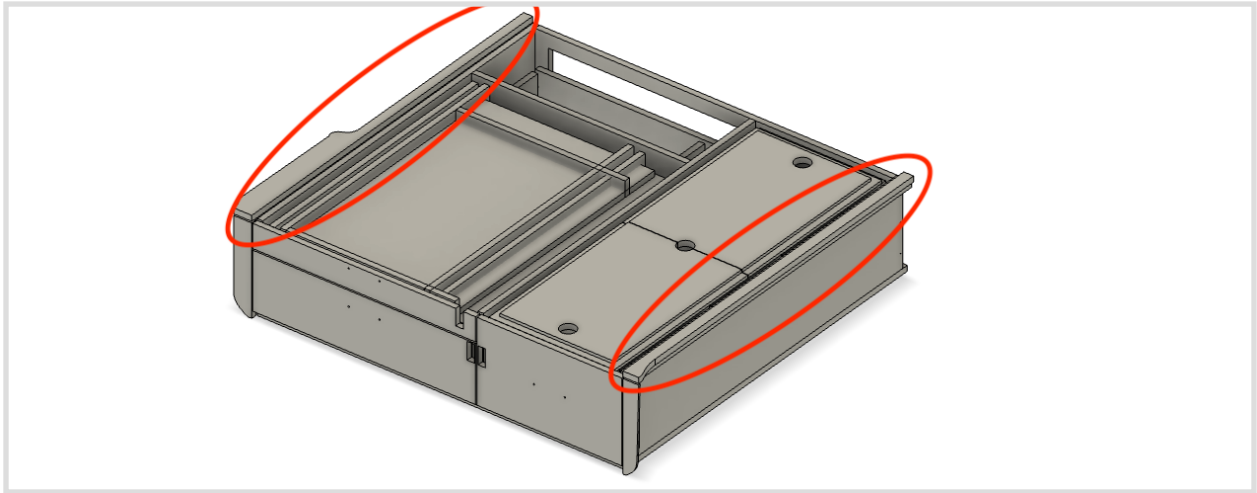

10. Push the drawer system to where it touches the 2nd Row Seats.
11. Snug up the bolts from step 7. They do not need to be very tight.
12. Run the strap from step 3 through the D-Rings installed in step 4. Put the end into the cam lock strap and tighten.
13. Reinstall the drawers. Make sure the gray bearing tray stays towards the end of the slide, it will make the reinstall easier. The first couple of cycles will feel very tight, but the bearings will settle into place with use.
14. Enjoy the drawer system!

As always, call 859-749-8588 with any questions.