


SHW OFFROAD


GX460 Drawer System Install

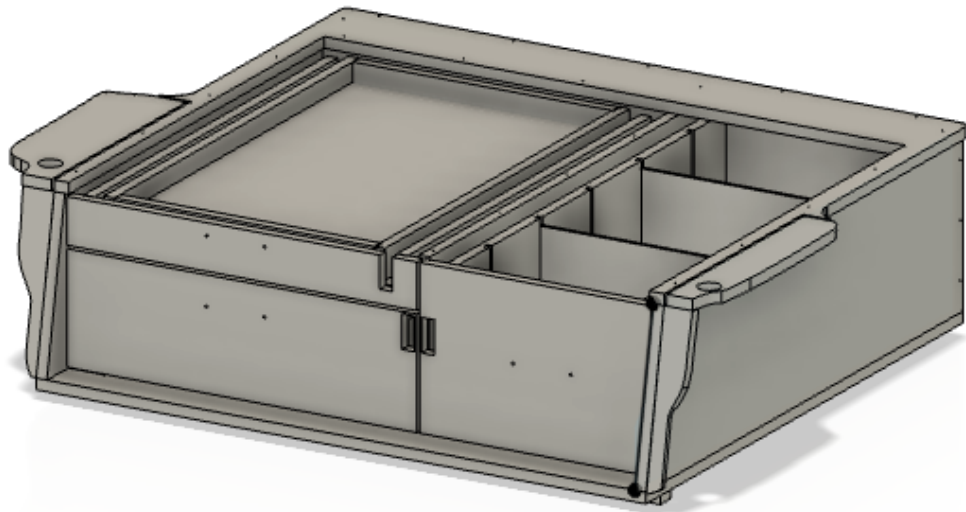

1. Begin by removing the third row seats from the vehicle.
2. Once that is completed, take the two included blue straps and loop them around the seat belt brackets on each side (Pictured Below).



3. Remove the wings and the wing caps (HIGHLIGHTED BELOW) from the drawer system for install. Make sure the D Ring tie downs are installed on sides of the drawer system.

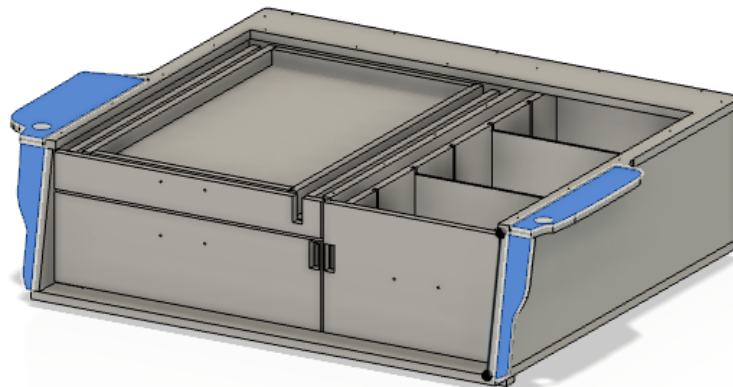

Optional: Install the wing caps before sliding the system in the vehicle. You must be careful not to slide the system in too far and brake off the wing caps, but the wing caps are easier to install this way. Use a 3" long T10 bit to install the wing cap screws. The driver side wing cap screws are driven at an angle. You will need to open the driver side drawer and fridge tray to gain access to the holes. Please contact us if assistance is needed, take your time.



4. Slide the drawer system into the the cargo area. Make sure the system is lined up back to front and side to side. Make sure the blue straps installed earlier are not caught under the drawer system.
5. Loop the blue straps through the D Rings on the drawer system, do not tighten yet.
6. Reinstall the wings and wing caps.
7. Check for even fitment all around the drawer system.
8. Remove the wings and wing caps if necessary to tighten the blue straps. They only need to be snug.
9. Reinstall your wings and wing caps.
10. Enjoy the drawer system!

As always, call 859-749-8588 with any questions.