



SHW OFFROAD

## GX470 Drawer System Install

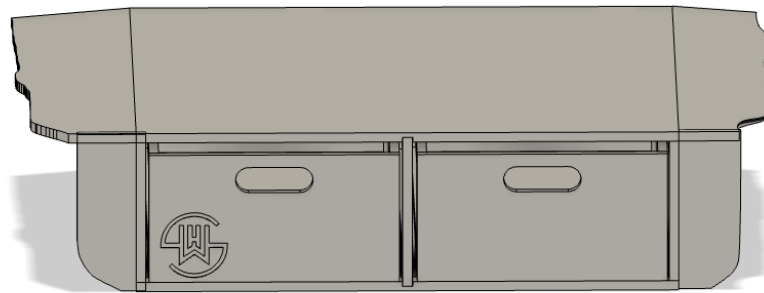


1. Begin by removing the third row seats from the vehicle if equipped. The factory tie downs also need to be removed.
- 2.
3. Install the driver side wing caps and both wings. The wing cap screws will be installed from the inside of the drawer system. The wing hinge components should already be installed, you simply need to start the hooks at the top and press at the bottom. It is easiest to do this with the upper adjustment screw tightened down all the way if needed.

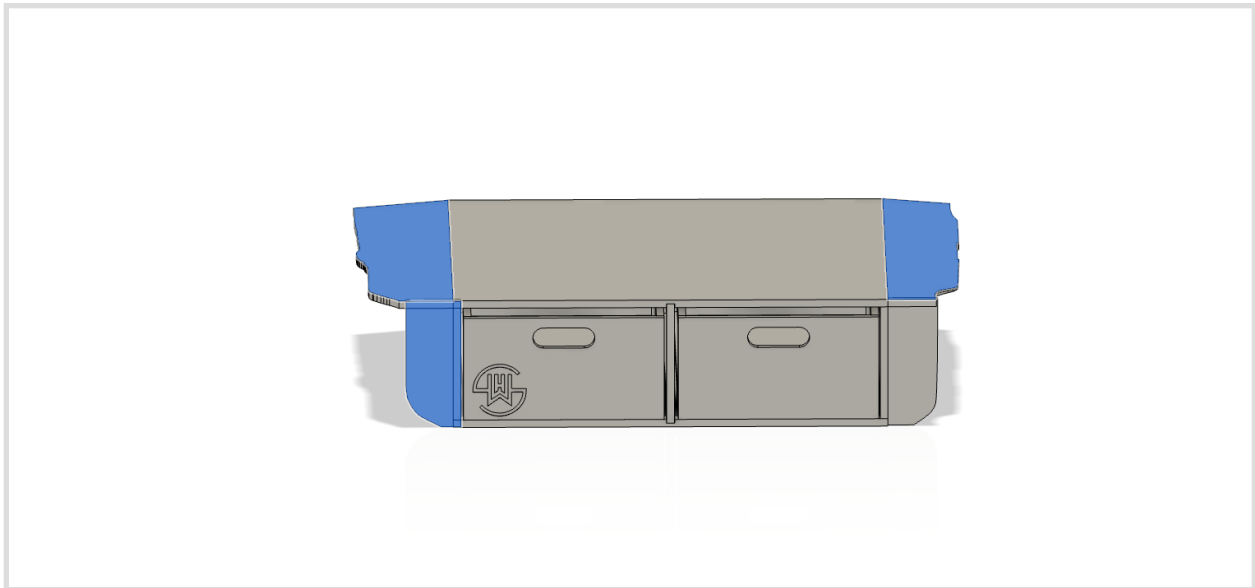

4. Slide the drawer system into the vehicle. Be careful with the wing cap on the driver side. Make sure the wings are in the upright position when you go to slide the system into the cargo area.

5. Install the passenger side wing cap.

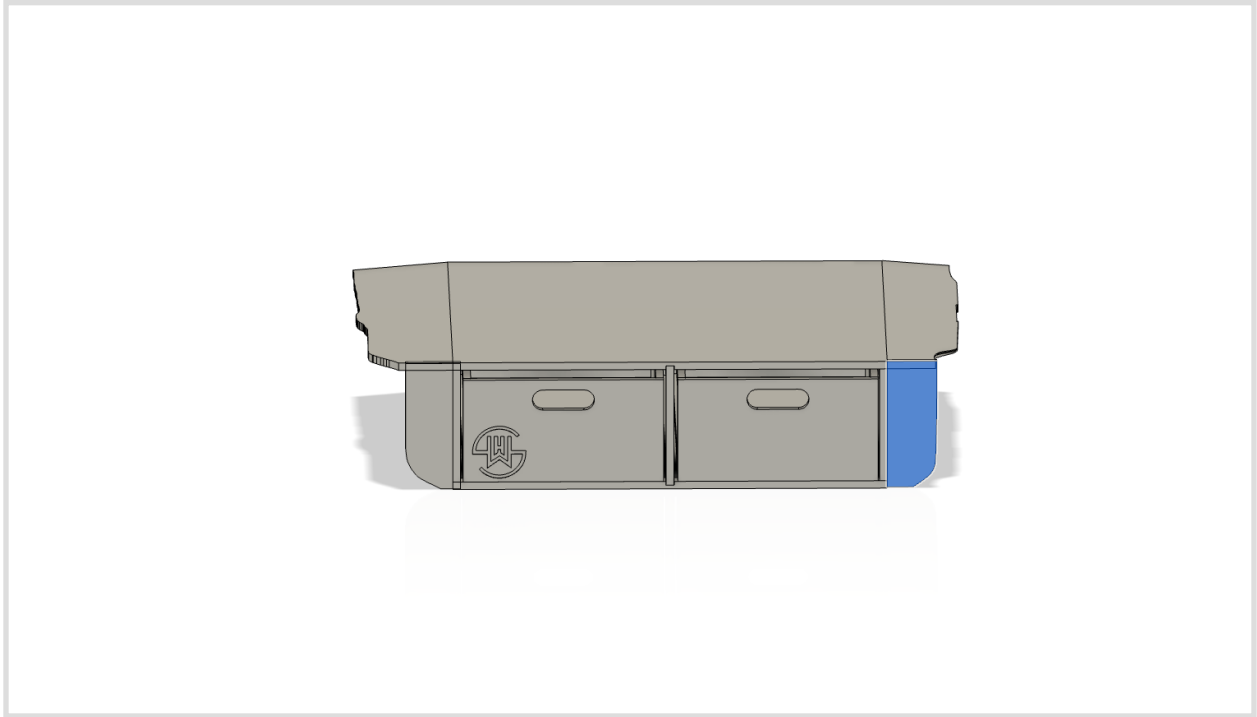

6. Place the bolts through the base of the system and thread them into the factory tie down holes. Torque them down, but do not over tighten. The bolts only need to be snug.