



SHW OFFROAD


Jeep JT Seat Replacement System Install

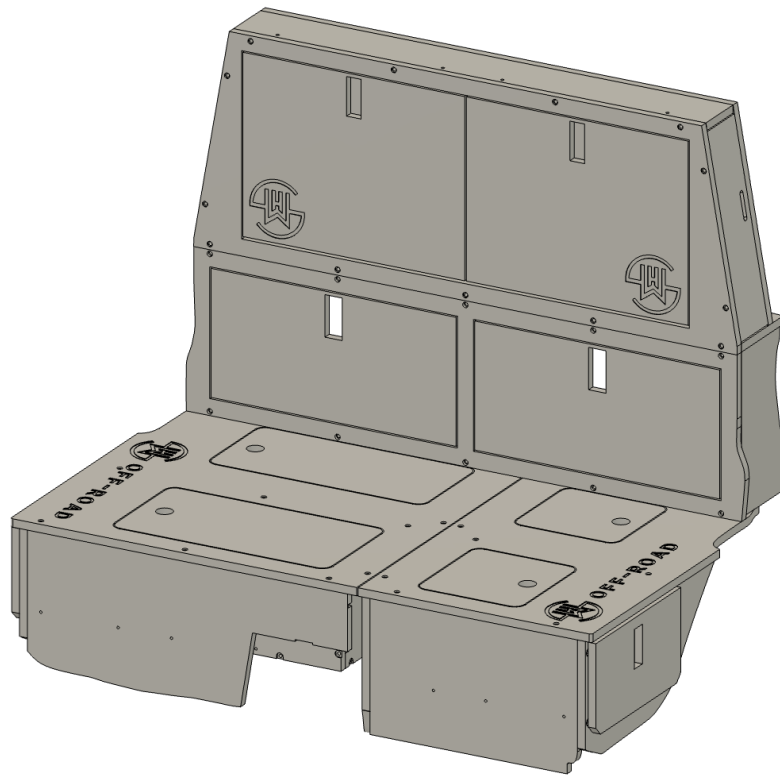


1. Remove the seats in the Gladiator. Also remove the top seat belt bolts and the bolts along the base of the hardtop where it meets the back wall of the cab. These bolts will be used to mount the Upper Decker base in step 3.
2. Remove Upper Decker Base Plate and MOLLE panels to prepare for install. There should be 5 bolts along the front face and three bolts on the bottom. You will need a 5/32 hex key for this.

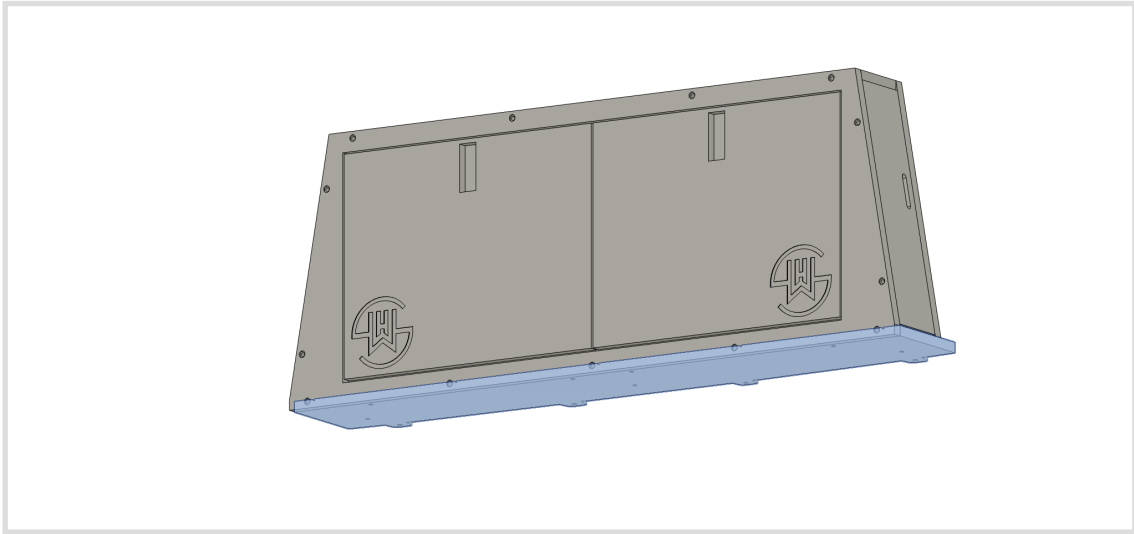


3. Install the Upper Decker Base Plate using the factory hard top bolts.

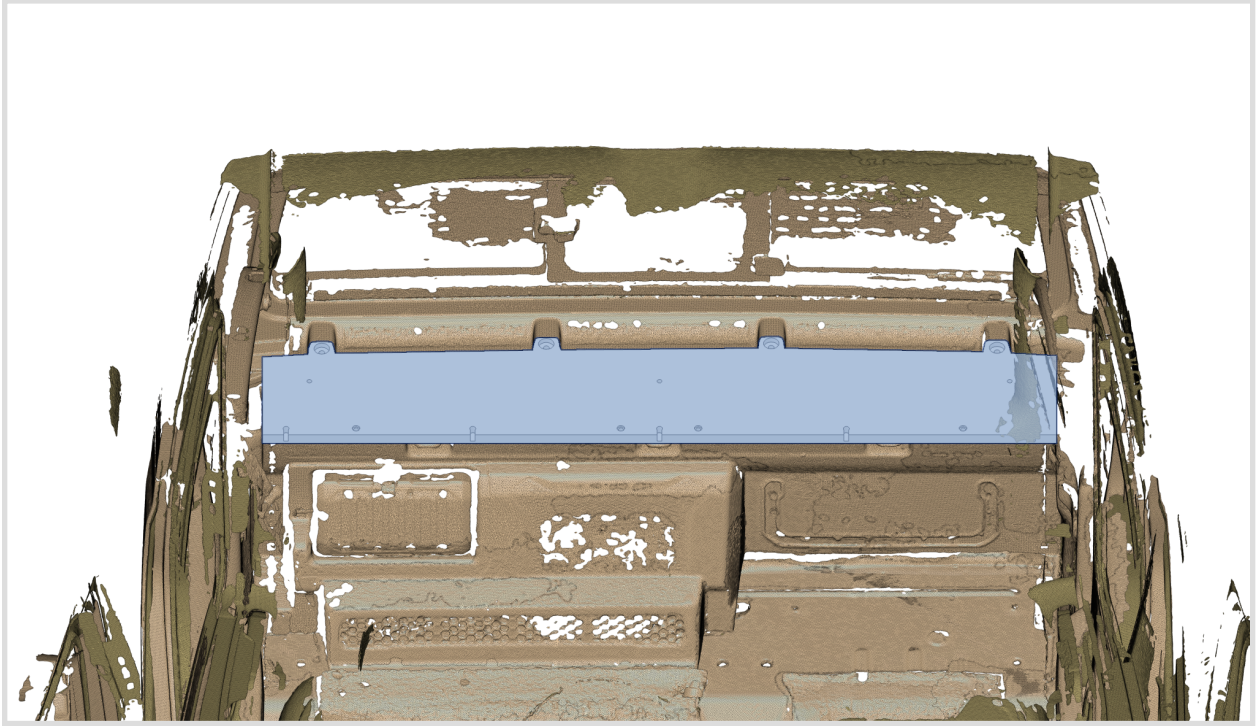



4. Install the Upper Decker Cabinet using the bolts removed from the cabinet in step 2. Do not install the seat belt bolts through the side slots yet.

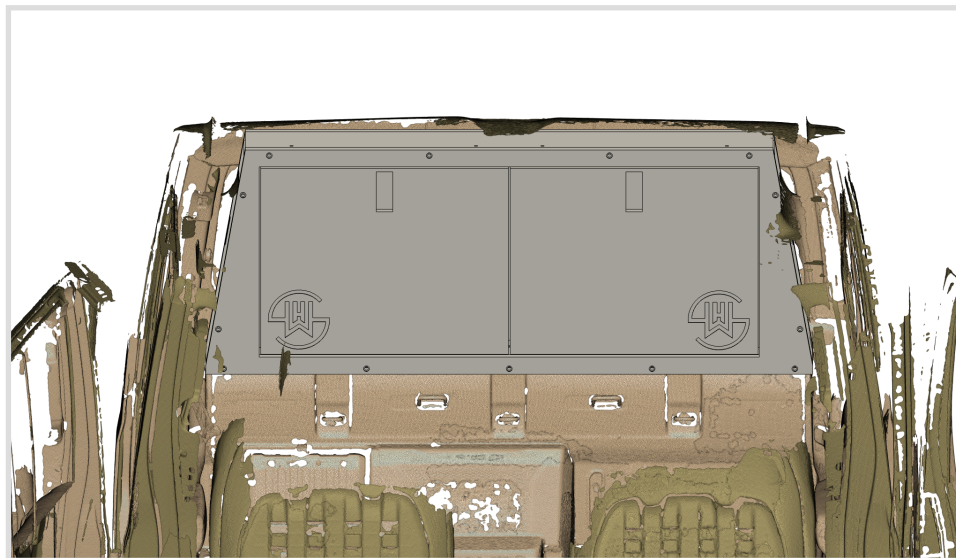

5. Place the seat deletes into position.

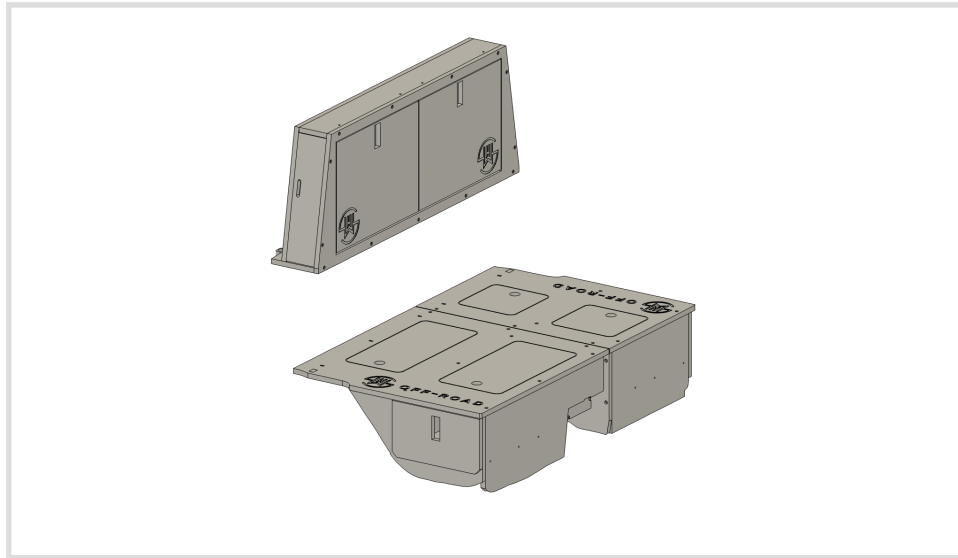

6. Screw the mid panel filler plates to the mid panel using the square head screws. Install the mid panel between the Upper Decker and Seat Deletes. Line up the holes with the cross dowels and install the bolts from the bottom and top of the mid panel, through the seat deletes and Upper Decker respectively. You may need to force the upper decker up slightly to fit the mid panel in place.

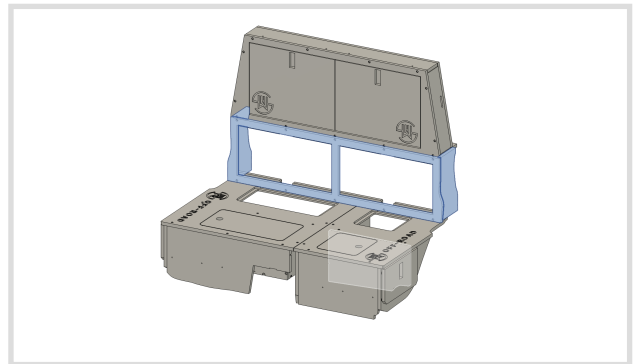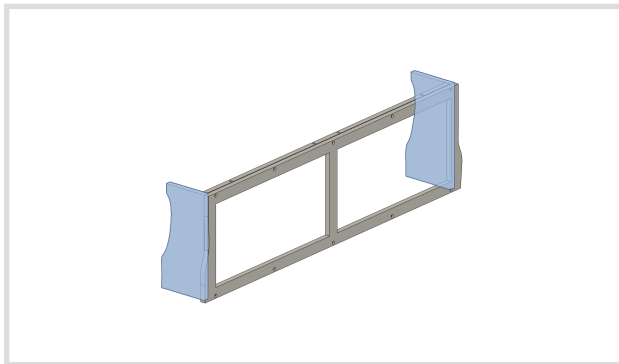

7. Install the upper seat belt bolts through the slots in the Upper Decker. Install the MOLLE panel in the Upper Decker.

8. Install the lower seat delete brackets using the factory seat bolt and a square head screw on each seat delete.



9. As always, call 859 749 8588 with any questions!